

Молния

PASSPORT

АСИС-1 • VERSION 4.2



- 1 – hour hand
- 2 – minute hand
- 3 – second hand
- 4 – two position winding crown

- I – neutral position
- II – position 2

DESCRIPTION, FUNCTIONS AND DISPLAYS

BEFORE YOU BEGIN USING THE WATCH, PLEASE READ THIS IMPORTANT INFORMATION

AChS-1 4.2 watch features an automatic winding watch movement.

1. SETTING THE CURRENT TIME

Pull the winding crown of the movement out into position II.

Turn the winding crown clockwise to set the current time.

Put the winding crown in the initial position. Second hand starts moving.

2. SETTING THE CURRENT DATE

Pull the winding crown of the movement out into position II.

Turning the winding crown set the current date.

Put the winding crown in the initial position.

3. ACCELERATED SETTING OF THE CURRENT DATE.

Moving the hour hand from the number “12” to the number “8” counterclockwise, and then back to the number “12” (until a new number appears). The cycle repeats until the required number appears.

4. WINDING

Automatic winding

Constant arm movements cause the rotor to pivot and then the self-winding mechanism sets the watch in motion.

Manual winding

When using the watch for the first time or if it has not been worn for a long period, it is recommended to wind the watch 8-10 times, rotating the winding crown clockwise. For future reference, you need to rotate the winding crown 40 times in order to fully wind the watch manually. The power reserve is approximately 31 hours. Stop rotating the crown as soon as you feel any resistance.

ATTENTION: IF YOU CONTINUE TO WIND THE WATCH AFTER YOU HAVE FELT RESISTANCE, YOU RUN THE RISK OF BREAKING THE TIP OF THE SPRING. IF THIS OCCURS, THE BARREL WHERE THE MAINSPRING IS WILL NEED TO BE REPLACED AT THE OWNER'S OWN EXPENSE.

INSTRUCTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

Watch AChS-1 Version 4.2 have a water resistance of 10 ATM, this marking is conditional and means a pressure withstand at 10 atmospheres.

This watch will not be damaged by splashes or rain, and you can wash your hands without taking it off. You can swim with this watch and it can be submerged in water. However, these watches are not suitable for scuba diving.

2. CARE

We recommend that you clean the watch regularly (except for the leather strap) with a soft cloth moistened with warm soapy water.

3. PRECAUTIONARY MEASURES

- Never attempt to open the case or remove the back cover by yourself.
- The rubber gasket protecting the watch from water and dust should be replaced every 2-3 years.

- If the inside of the watch gets wet, you should bring it to an authorized service center to have it checked immediately.
- Do not expose the watch to extreme temperatures.
- Treat the watch with care and avoid any hard impact (bumps, falls, etc.).
- Do not fasten the strap too tightly. You should be able to slide a finger between your wrist and the strap.
- The watch should be stored in a dry place.
- Do not let it come in contact with gasoline, cleaning solvents, spray aerosols, adhesives, paint, etc. These substances cause chemical reactions which could damage the gasket, case and the polished surfaces of the watch.
- Sapphire crystal is quite durable, but it may crack if the watch is dropped or hit.
- Avoid storing your watch with precious jewelry, as diamonds can damage sapphire crystal.
- It is preferable to store the watch in a special separate box, lined with soft protective material.

TECHNICAL SPECIFICATIONS

Case diameter	48 mm
Case material	316L Steel
Strap width	22 mm
Type of glass	Sapphire crystal
Movement	Vostok 2416B automatic movement
Accuracy	-20 ...+60 sec per day
Number of stones applied	31
Power reserve	31 hours
WR	10 ATM

WARRANTY

In accordance with the Decree of the Government of the Russian Federation No. 471 from 27.05.2016 «On amendments to certain acts of the Government of the Russian Federation on the return or exchange of technically sophisticated goods», this product is categorized as a technically sophisticated, and therefore, the buyer does not have the right to demand a free replacement for the repair period or a demand it be replaced with a similar product, and the buyer does not have the right to return or exchange the product with similar products of a different size, shape, different dimensions, style, color or configuration.

The warranty only applies to products purchased from authorized sales outlets.

The manufacturer's warranty is valid for one (1) year from the date of sale of the product. The warranty covers defect and faults in assembly materials. If a problem should arise during the warranty period, the manufacturer shall rectify any defects or repair any malfunctions absolutely free of charge. If the quality of the watch is not able to be restored through repairs, the manufacturer guarantees the replacement of the watch with the same watch or a model

with identical specifications. Repairs should only be carried out at authorized service centers. The contact details for authorized service centers are provided by authorized sales representatives.

LIMITATIONS AND RESTRICTIONS

The warranty does not cover:

- glass and strap;
- wear and tear or defects resulting from the use of the watch (e.g. scratches on the glass, changes in the color and/or material of non-metallic straps and bracelets, etc.);
- any damage to any part of the watch resulting from improper use, lack of care, or careless handling of the watch (bumps, chips, dents, cracks, etc.);
- any unauthorized repair or the owner's own tampering with the design of the watch and/or its appearance automatically excludes these watches from warranty service.

WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card which has been filled out by both the buyer and the vendor who sold the watch.

SERIAL NUMBER _____

DATE OF SALE _____

SELLER

Vendor

(name of trading organization) _____

Address and phone number

(trading organization) _____

STAMP HERE _____ BUYER

I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.

**ATTENTION! THE WARRANTY CARD IS NOT VALID
WITHOUT THE VENDOR'S STAMP!**

Name of the authorized service center

The following steps have been taken in troubleshooting:

Service center employee Date

(Signature, full name)

Owner

Date

(Signature, full name)

NOTES

+7 (351) 700-13-79

+7 (495) 741-95-36

454091, Russian Federation,
Chelyabinsk, 25 Tsvillinga Street

sales@molnija.shop

www.molnija.shop

Молния