

*Молния*

---

PASSPORT

ACHS PILOT



- 1 – Hour hand
- 2 – Minute hand
- 3 – Small second hand
- 4 – Winding crown

- I – First (winding) position
- II – Second (time-setting) position,  
crown fully pulled out

## DESCRIPTION AND INSTRUCTIONS

The AChS PILOT wrist watch comes equipped with the 3603 manually wound shock-resistant mechanical movement.

### 1. WINDING

Winding is performed by turning the crown in a clockwise direction while the crown is in the first position. Full winding takes 23 turns of the crown. Be sure to stop winding as soon as any resistance is felt.

**IMPORTANT:** Continuing to wind the watch after feeling resistance can lead to damage of the spring. All repairs necessitated by overwinding will be made at the customer's expense.

The provided power reserve is approximately 40 hours.  
We recommend winding once per day.

## 2. SETTING THE CURRENT TIME

Pull out the crown to the second position. Set the current time by turning the crown in a clockwise direction.

After setting the current time return the crown to the first position by pressing the crown towards the case.

## DIRECTIONS FOR USE, CARE AND STORAGE

### 1. WATER RESISTANCE

The AChS PILOT watches are water resistant to 10 ATM. This mark is conditional and means a watch pressure of 10 atmospheres. Such watches are resistant to splashing and rain. You can wash your hands, swim and go deep into water while wearing the watch. However, these watches are not meant for scuba diving. It must be remembered that you cannot pull out the crown or press the control buttons when the watch is wet.

**IMPORTANT: NEVER PULL OUT THE CROWN WHILE THE WATCH IS WET.**

Over time the normal wear on the watch will affect the overall water resistance. We recommend checking the watch at an authorized service center once a year to ensure a high level of water resistance and avoid accidental damage.

### 2. CARE

The watch (excluding the strap) should regularly be washed with a wet, soapy rag.

### 3. PRECAUTIONS

- Never try to open the watch or remove the case back.
- The watch should be checked at least once a year for resistance to water and dust. If necessary, replacement of the gaskets should be performed only in authorized service centers.
- Before submerging the watch in water, make sure the crown is in the first position.
- If water enters the case, bring the watch to an authorized service center as soon as possible.
- Do not subject the watch to extreme conditions (above 60 degrees Celsius or below -5 degrees Celsius). While the watch is being worn body heat protects it from extreme temperature changes.

- Do not drop, hit, or strike the watch.
- Do not fasten the strap too tightly. The watch should be fastened as to allow a finger between the watch strap and arm.
- The watch should be kept in a dry place.
- Prevent the watch from being exposed to gasoline, cleaning supplies, aerosols, paints, etc, as they may react with it and damage the gaskets, case and/or its coating.
- The sapphire crystal has a special anti-scratch coating but can crack if struck or dropped.
- Store the watch away from jewelry, as diamonds can scratch the crystal.
- Store the watch in a separate box lined with soft fabric.

## TECHNICAL CHARACTERISTICS

<b>Case diameter</b>	42 mm
<b>Case material</b>	Steel 316L
<b>Strap width</b>	20 - 18 mm
<b>Strap material</b>	Genuine leather
<b>Type of glass</b>	Sapphire crystal
<b>Accuracy under normal temperature</b>	- 15 ... +40 seconds per day
<b>Movement</b>	Mechanical movement, manually wound, caliber 3603, 18 jewels
<b>Power reserve</b>	up to 40 hours
<b>Water resistance</b>	10 ATM

## CONDITIONS OF WARRANTY

The warranty covers only those watches sold by authorized dealers.

Warranty lasts for 1 year from date of purchase. The warranty covers material and assembly defects. In the event of a problem falling under the conditions of the warranty the manufacturer will repair the defect at no cost to the consumer. If a repair is impossible, the manufacturer will replace the watch with an identical one, or one with the same characteristics. Repairs should take place only in authorized centers. To find an authorized service center, contact your local retailer.

## EXCLUSIONS

### **Warranty does not cover:**

- Crystal and strap
- Problems arising from use of the watch (scratches on the crystal, color changes of non-metallic straps and bracelets etc)
- Any damage caused from improper use of the watch, lack of maintenance or mishandling (scratches, cracks, dents, etc)
- Any unauthorized attempts to repair the watch and/or change the appearance or construction of the watch
- Water damage caused from improper use of the crown

## WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card which has been filled out by both the buyer and the vendor who sold the watch.

SERIAL NUMBER \_\_\_\_\_

DATE OF SALE \_\_\_\_\_

VENDOR

name of trading  
organization \_\_\_\_\_

Address and phone  
number \_\_\_\_\_  
(trading organization)

STAMP HERE \_\_\_\_\_ BUYER

I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.

**ATTENTION! THE WARRANTY CARD IS NOT VALID  
WITHOUT THE VENDOR'S STAMP!**

\_\_\_\_\_  
Name of the authorized service centre

**The following steps have been taken in troubleshooting:**

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Service centre employee      Date

\_\_\_\_\_  
(Signature, full name)

Owner      Date

\_\_\_\_\_  
(Signature, full name)

+7 (351) 700-13-80  
+7 (351) 700-13-79

454091, Russian Federation,  
Chelyabinsk, 25 Tsvillinga Street

[sales@molnija.shop](mailto:sales@molnija.shop)  
[www.molnija-ltd.ru](http://www.molnija-ltd.ru)  
[www.molnija.shop](http://www.molnija.shop)

***Молния***