

PASSPORT

TRIBUTE 1984 3.0



DESCRIPTION AND INSTRUCTIONS

The Tribute 1984 3.0 wrist watch comes equipped with the 3603 manually wound shock-resistant mechanical movement.

1. WINDING

Winding is performed by turning the crown in a clockwise direction while the crown is in the first position. Full winding takes 23 turns of the crown. Be sure to stop winding as soon as any resistance is felt.

IMPORTANT: Continuing to wind the watch after feeling resistance can lead to damage of the spring. All repairs necessitated by overwinding will be made at the customer's expense.

The provided power reserve is approximately 40 hours. We recommend winding once per day.

2. SETTING THE CURRENT TIME

Pull out the crown to the second position. Set the current time by turning the crown in a clockwise direction.

After setting the current time return the crown to the first position by pressing the crown towards the case.

DIRECTIONS FOR USE, CARE AND STORAGE

1. WATER RESISTANCE

The Tribute 1984 3.0 watches are water resistant to 10 ATM. This mark is conditional and means a watch pressure of 10 atmospheres. Such watches are resistant to splashing and rain. You can wash your hands, swim and go deep into water while wearing the watch. However, these watches are not meant for scuba diving. It must be remembered that you cannot pull out the crown or press the control buttons when the watch is wet.

IMPORTANT: NEVER PULL OUT THE CROWN WHILE THE WATCH IS WET.

Over time the normal wear on the watch will affect the overall water resistance. We recommend checking the watch at an authorized service center once a year to ensure a high level of water resistance and avoid accidental damage.

2. CARE

The watch (excluding the strap) should regularly be washed with a wet, soapy rag.

3. PRECAUTIONS

- Never try to open the watch or remove the case back.
- The watch should be checked at least once a year for resistance to water and dust. If necessary, replacement of the gaskets should be performed only in authorized service centers.
- Before submerging the watch in water, make sure the crown is in the first position.
- If water enters the case, bring the watch to an authorized service center as soon as possible.
- Do not subject the watch to extreme conditions (above 60 degrees Celsius or below -5 degrees Celsius). While the watch is being worn body heat protects it from extreme temperature changes.

- Do not drop, hit, or strike the watch.
- Do not fasten the strap too tightly. The watch should be fastened as to allow a finger between the watch strap and arm.
- The watch should be kept in a dry place.
- Prevent the watch from being exposed to gasoline, cleaning supplies, aerosols, paints, etc, as they may react with it and damage the
- gaskets, case and/or its coating.
 The sapphire crystal has a special anti-scratch coating but can crack if struck or dropped.
- Store the watch away from jewelry, as diamonds can scratch the crystal.
- Store the watch in a separate box lined with soft fabric.

TECHNICAL CHARACTERISTICS

Case diameter	42 mm	
Case material	Steel 316L	
Strap width	22-20 mm	
Strap material	Genuine leather	
Type of glass	Sapphire crystal	
Accuracy under normal temperature	- 15 +40 seconds per day	
Movement	Mechanical movement, manually wound, caliber 3603, 18 jewels	
Power reserve	up to 40 hours	
Water resistance	10 ATM	

CONDITIONS OF WARRANTY

The warranty covers only those watches sold by authorized dealers.

Warranty lasts for 1 year from date of purchase. The warranty covers material and assembly defects. In the event of a problem falling under the conditions of the warranty the manufacturer will repair the defect at no cost to the consumer. If a repair is impossible, the manufacturer will replace the watch with an identical one, or one with the same characteristics. Repairs should take place only in authorized centers. To find an authorized service center, contact your local retailer.

EXCLUSIONS

Warranty does not cover:

- Crystal and strap
- Problems arising from use of the watch (scratches on the crystal, color changes of non-metallic straps and bracelets etc)
 Any damage caused from improper use of the watch, lack
- of maintenance or mishandling (scratches, cracks, dents, etc)
- Any unauthorized attempts to repair the watch and/or change the appearance or construction of the watch
- Water damage caused from improper use of the crown

WARRANTY CARD

All warranty claims for repairs must be accompanied by a warranty card		Name of the authorized service centre	
which has be the watch.	een filled out by both the buyer and the vendor who sold	The following steps have b	een taken in troubleshootin
SERIAL NU	MBER		
DATE OF SA	ALE		
VENDOR			
name of trad organization			_
Address and	phone	Service centre employee	Date
(trading orga	nization)		
	STAMP HERE BUYER	(Signature, full name)	
	I have read and agree with the terms of use. I do not have any complaints regarding the appearance or the performance of the watch.	Owner	Date
	N! THE WARRANTY CARD IS NOT VALID THE VENDOR'S STAMP!	(Signature, full name)	

+7 (351) 700-13-80 +7 (351) 700-13-79

454091, Russian Federation, Chelyabinsk, 25 Tsvillinga Street

> sales@molnija.shop www.molnija-ltd.ru www.molnija.shop

